



HUMIDIFIER SERVICE

- Replace water panel – if applicable (Included only in MPP).
- Clean water reservoir.
- Replace orifice.
- Clean inlet tube.
- Clean inlet orifice (replace if necessary).
- Clean inside drain panel.
- Clean drain line.
- Clean supply valve.
- Check and adjust Humidistat.
- Check complete humidifier operation.
- Make any necessary recommendations.